

Session #3

By Marie Duncan

Our next blocks will include the Circular attachment, the Three Hole Yarn Foot and the Ribbon Feet set.



Supplies:












- Circular Attachment 920344096
- Three Hole Yarn Foot 413187045
- OR Three Hole Yarn Foot for IDF System 920615096
- Ribbon Feet Set 920239096
- Three colors of cotton yarn
- Assorted ribbon sizes 1/4" – 3/8"
- INSPIRA® Tear Away Light Stabilizer 620112796
- Robison-Anton rayon or cotton embroidery thread
- Bobbin thread
- Chalk marker or Pictogram Pen
- Three 9" x 9" fabric squares

Square I - Circular Attachment:

1. Insert your Circular Attachment into the holes in your needle plate. It goes on very easily if you hold the left edge up in the air a bit as you insert the right-hand peg. Then lower the left-hand peg.
2. Thread with Robison-Anton rayon thread on top and bobbin thread in the bobbin.
3. Snap on your "B" foot.
4. Disengage your IDF. It will "work" to feed the fabric forward while the Circular attachment is "working" to feed it on an angle. It can result in the push pin being pulled away from the set number.
5. Select one of your 9" x 9" fabric squares.
6. Place INSPIRA® Tear Away Light Stabilizer underneath the fabric.




7. Select your stitch. Forward feeding stitches without sideways feed work best. Stitches with

a few backward stitches will work as well. The ones I used are, F16 , F28 , J2 , F26 , F2 , F32 , J23 , F4 , J8 , F56  and F34 . I stitched several rows with each thread color.

8. Insert the push pin into the fabric, and into the Size Guide. I used some in the corners, and some on the sides of the fabric squares.

9. Stitch your circular stitching.

10. Tear off the excess stabilizer.

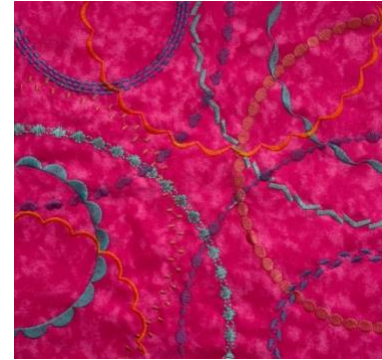

Square 2- Three Hole Yarn Foot:


1. Thread three different colors of cotton yarn into your Three Hole Yarn Foot or Three Hole Yarn Foot for IDF System.


2. Select one of your 9” x 9” fabric squares.


3. Thread with Robison-Anton rayon thread on top and bobbin thread in the bobbin.

4. Place INSPIRA® Tear Away Light Stabilizer underneath the fabric.

5. Using a chalk marker or your Pictogram pen, mark a line in the center of your square. Mark two additional lines on each side of the first one, one inch apart. Repeat in the opposite direction as shown.

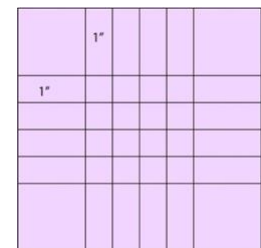

6. Engage your Laser . Check that the position of the laser is at 0 (1) which means it will be in the center. And then adjust the brightness (2) of the laser. I increase it all the way! Now, you can just keep the laser aimed at your marked line!

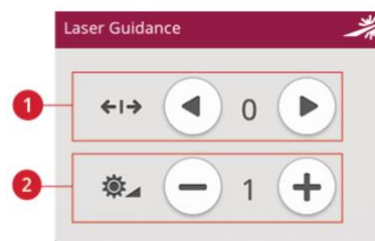

- Select your stitch. The Three Hole Yarn stitches are part of the Specialty Stitches Menu P. This menu has stitches that require presser feet that are optional and aren't included with your machine. The Three Hole Yarn stitches are P16-20. I used P19.



- Snap on your threaded foot.
- Stitch on all the vertical lines. Then stitch the horizontal lines.
- Tear off the excess stabilizer.



Square 3- Ribbon Feet Set:

The ribbon feet set uses a straight stitch to sew down a variety of different sizes of ribbon. There are three feet included. #1 with a 6.5mm opening, #2 with a 10.5mm opening and #3 with a 13.5mm opening.



- Thread with Robison-Anton rayon thread on top and bobbin thread in the bobbin. I didn't change the thread color for the different colors of ribbons but you can if you want to. It really doesn't show very much.



- Select straight stitch A2.
- Select a 9" x 9" square and place INSPIRA® Tear Away Light Stabilizer underneath the fabric.
- Insert the end of the first ribbon in the foot.
- Stitch random ribbons to fill the square. I couldn't help but think of Mardi Gras with mine!
- Tear off the excess stabilizer.

