






Mystical Whimsy Quilt – Class 12a

Quilting the Quilt

Your quilt top is finished, now it is time to quilt it together. There are so many decorative stitches available on the PFAFF® sewing machines that can be used to quilt your masterpiece, let's explore them.




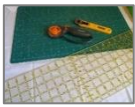



Supplies:

Backing and Hanging Sleeve Fabric		1(42" x 60") Quilt Back 1(6" x 37") Hanging Sleeve
Binding Fabric		5(2½" x 42") Binding
Cotton Batting		1(42" x 60")
Assembled Quilt Top		
¼ Inch Quilting Foot for IDT™ System or Clear ¼ Inch Quilting Foot for IDT™ System		Part #820926096 Part #820883096

2A Fancy Stitch Foot		Part #820774096
8 – Maxi Stitch Foot		Included with machines that have Maxi Stitches
Grand Piping Foot for IDT™ System or Welting Foot	 	Part #820977096 or Part #820530096
Multi-line Decorative Foot		Part #82108096
Narrow Edge Foot for IDT™ System		Part #821142096
Open-toe Free-motion Spring Foot		Part number dependent on machine model
Perfect ¼" Foot with Guide for IDT™ System or ¼" Right Guide Foot for IDT™ System	 	Part #821063096 or Part #820924096
Piping Foot		Part #820532096
Rolled Hem Foot for IDT™ System, 4mm		Part #820221096
Sewing Star Foot for IDT™ System		Part #820654096
Stitch-in-Ditch Foot for IDT™ System or Clear Stitch-in-Ditch Foot for IDT™ System	 	Part #820925096 or Part #821143096

Extension Table		Part number will be dependent on PFAFF® sewing machine model
PFAFF® Topstitch Needle Size 90/14, 5 pack		Part #821196096
PFAFF® Universal Needle Size 80/12, 5 pack		Part #821194096
PFAFF® Quilting Needle Size 90/14, 5 pack		Part #821313096
Robison-Anton Metallic Embroidery Thread		Part number based on color
Robison-Anton 40wt Rayon Thread		Part number based on color
50wt Cotton Sewing Thread		
60wt Bobbin Thread		To match backing fabric
Invisible Polyester Thread		
PFAFF® 4"/10.2cm Micro Tip Straight Blade Scissor		Part #821286996
SINGER® Steam Iron		Part number dependent on iron model.

Safety Pins		
Water-soluble Marker		
Chalk Marker		
Rotary Cutter, Mat, 6" x 24" Ruler		
Temporary Spray Adhesive (Optional)		
Other Supplies <ul style="list-style-type: none"> • Ironing Surface • Pressing Cloth • Hand Sewing Needle 		

Fabric Preparation: Sandwiching the Quilt

1. Press the quilt top and backing fabric with a SINGER® Steam Iron.
2. Lay the 42" x 60" backing fabric right side down on a flat surface. Place the cotton batting on top.
3. Center the quilt right side up on the batting/backing sandwich.
4. Safety pin or spray baste the layers together with Temporary Spray Adhesive.

Quilting Instructions

Note: These instructions are only suggestions on how to quilt your quilt.

Sewing Machine Preparations

1. Insert a PFAFF® Quilting Needle Size 90/14 in your PFAFF® sewing machine.
2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
3. Thread with Invisible Polyester Thread on top and 60wt Bobbin Thread to match your backing on the bobbin.
4. Attach the Stitch-in-Ditch Foot for IDT™ System or Clear Stitch-in-Ditch Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.



5. Select a Straight Stitch and increase the Stitch Length to 3.0.

Sewing Instructions

1. Stitch in the ditch between the rows of the quilt and any of the strip piecing sections.



Sewing Machine Preparations

1. Attach Grand Piping Foot for IDT™ System or Welting Foot.

Sewing Instructions

1. Stitch around the piping on the large circle using either of the feet.



Sewing Machine Preparations

1. Attach the Piping Foot.


Sewing Instructions

1. Stitch around the piping on the small circles.




Sewing Machine Preparations

1. Attach Perfect 1/4" Foot with Guide for IDT™ System or the 1/4" Right Guide Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.

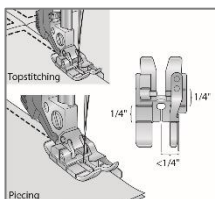

Or

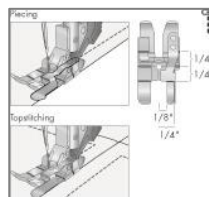

Sewing Instructions

1. Stitch a ¼" in from the edges of the Candlewicking sections on the small circles letting the guide of the foot ride in the ditch between the seams.



Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Change the thread on top to Robison-Anton 40wt Rayon thread.
3. Select a Stretch Triple Straight Stitch.

Sewing Instructions

1. Stitch a ¼" in from the edges on Fabric #3 on the center row panels.
2. Stitch a ¼" in from the edges on the Floating Stitches section.



Sewing Machine Preparations

1. Attach Sewing Star Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.

Sewing Instructions

1. Stitch between the Floating Stitches.



2. Draw diagonal lines with a chalk marker on the section with the diagonal 9-Hole cording the same width apart as the cording spacing.
3. Stitch on the drawn lines.



4. Select a decorative stitch and stitch down the center of Fabric #3 on the center row.




Sewing Machine preparations

1. Attach the Multi-line Decorative Foot to your PFAFF® sewing machine.
2. There are many decorative stitches available on your PFAFF® sewing machine and quilting with those stitches gives you an opportunity to try a variety of those stitches. With the assistance of the Multi-line Decorative Foot and the *creative icon*™ 2 Projector you can easily space your stitches.
3. Select a decorative stitch.

Sewing Instructions

1. Stitch several rows of decorative stitches in the Fabric #3 section of the top and bottom rows.

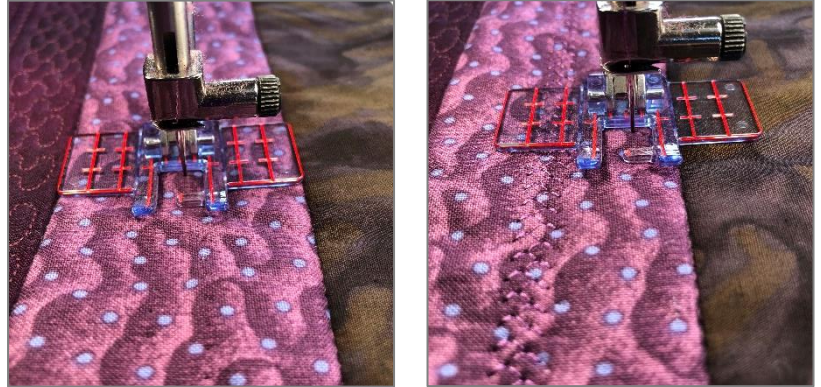

2. Stitch a decorative stitch down the center of Fabric #6 in the large circle.




Stippling Stitches

Note: In the Quilting Menu, there are a variety of Stippling Stitches that add to the finished look of your quilt. Below are pictures of how Stippling Stitches were added to this quilt.

Sewing Machine Preparations

1. Use the recommended foot for the stitch chosen.
2. Use 40wt Rayon or Metallic thread on to enhance your stitches.
3. Choose stitches from the Stippling Stitches menu.

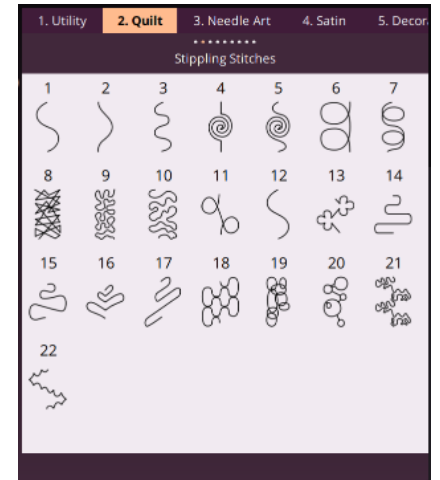

Sewing Instructions

1. The next group of pictures shows various stitches from the Stippling Stitches menu sewn on the quilt.





Free-Motion Sewing Machine Preparations



Note: Refer to the User's Guide for your model of PFAFF® sewing machine to set up for Free-Motion.

1. On the *creative icon*™ 2 touch Free-Motion to open a window where you can select between the 4 different Free-Motion Options.
2. The feed teeth are lowered automatically when free-motion is selected.
3. Select the Spring mode in the Free-Motion Options; this is for optional Spring Feet. Note: The Spring Foot will raise and lower with each stitch to hold the fabric on the needle plate while the stitch is being formed, this is ideal when you are stitching over uneven surfaces because it will adjust to the various heights.
4. Attach the Open-toe Free-motion Spring Foot.




Sewing Instructions

1. Free-motion stipple quilt any areas on the quilt that you would like to fill with quilting.
2. See the following pictures of some areas that are quilted with free-motion stippling.

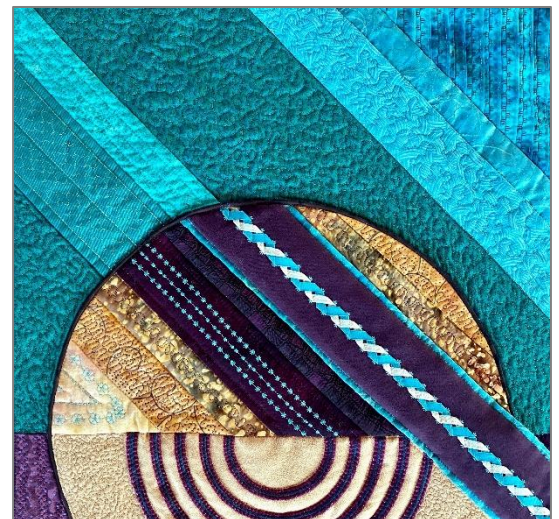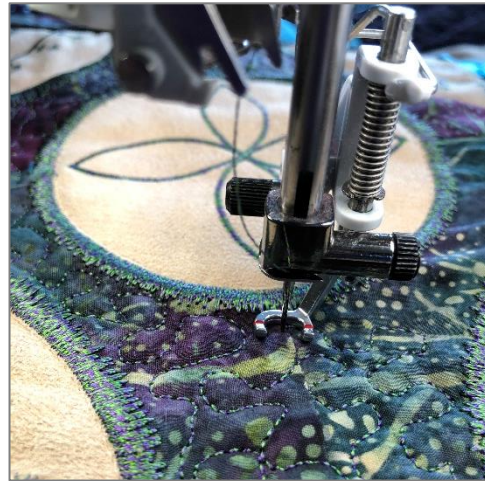

Binding and Hanging Sleeve

Sewing Machine Preparations


1. Insert a PFAFF® Universal Needle Size 80/12 in your PFAFF® sewing machine.
2. Thread with 50wt cotton sewing thread on the top and on the bobbin.
3. Attach Sewing Star Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
4. Select a Three-step zigzag stitch. 

Sewing Instructions

1. Stitch around the perimeter of the quilt.
2. Trim the excess batting and backing around the perimeter of the quilt.

Sewing Machine Preparations for Hanging Sleeve

1. Select a straight stitch,
2. Attach the Rolled Hem Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.

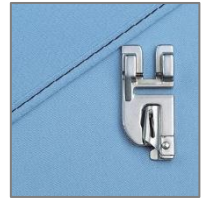


Sewing Instructions

1. On the 6" ends of the 6" x 37" Hanging Sleeve you will stitch a rolled hem.
2. Place the fabric flat in the groove under the foot and sew a few stitches.
3. Lower the needle into the fabric to hold it in place.
4. Raise the presser foot and pull the cut edge of the fabric into the scroll of the hemmer.
5. Lower the foot and continue sewing while holding the cut edge up in front of the foot.
Note: Do not allow fabric to run under the right half of the presser foot.
6. Press the Hanging Sleeve wrong sides together along the 37" length.

Sewing Machine Preparations

1. Attach the ¼ Inch Quilting Foot for IDT™ System or the Clear ¼ Inch Quilting Foot for IDT™ to your PFAFF® sewing machine and engage the IDT™.

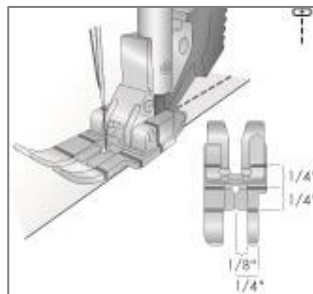

Sewing Instructions

1. Center and pin the raw edges of the hanging sleeve to the wrong side of the top of the quilt.
2. Sew using an 1/8" seam allowance.
3. Hand stitch the bottom of the Hanging Sleeve (this will be side with fold) to the back of the quilt.

Sewing Instructions for the Binding

1. Stitch the 5(2½" x 42") Binding strips together to form one long strip.
2. Press the seams open.
3. Press the binding wrong sides together along the length of the strip.
4. Sew the binding to the front of the quilt with the raw edges together using a ¼" seam allowance.
5. Join the ends using your preferred method.
6. Fold the binding to the wrong side of the quilt and pin in place.

Sewing Machine Preparations

1. Attach the Narrow Edge Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.



Sewing Instructions for the Binding

1. Stitch from the front side of the quilt, letting the guide of the foot ride in the ditch between the binding and the quilt. Stitch all the way around the quilt.

Note: there is separate set of instructions on creating the Quilt Label in Class 12b.

Congratulations, you have completed your quilt.

